


Update Firmware for JetNet 4000 Series

Please follow the following steps to upgrade the firmware of JetNet 4000 Series switch.


1. Save the firmware in your PC.
2. Run the TFTP software in your PC to act as the TFTP server. Keep the default setting as below. The Base Directory is the folder location where you save the firmware.

Hint: The “dot” means the firmware is kept in the same location as the TFTP software.

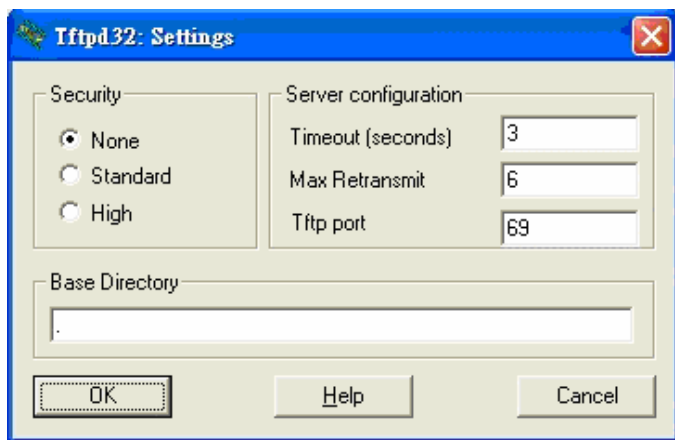

Note: The Tftpd32 is a shareware. You can use other TFTP software too.

3. Open the JetNet switch web configuration. In the “TFTP Update Firmware” configuration, specify the TFTP IP address, i.e. the IP address of the PC where you save the firmware and the name of the firmware. Click on **Apply** to save the configuration.

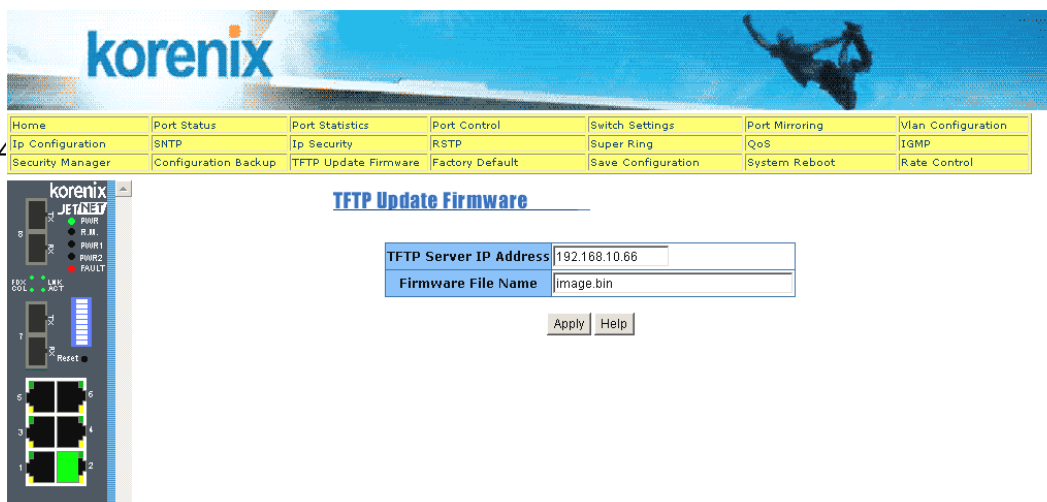

4. When the firmware finishes upgrading, the system will switch to reboot function. Click the **Reboot** button to reboot the system. Do not shut down the switch during the procedure.

System Reboot

Please click **[Reboot]** button to restart switch device.

Reboot

Note: It is recommended that you use direction connection from the PC to JetNet for firmware upgrading purpose to avoid the risk of disrupted network connections during the upgrading procedure.