

Go to the registration page and fill out the JetView Pro Registration Form.

After you submit the form, Korenix will send you an e-mail with Authentication Code.

Please start JetView Pro (16-nodes version) and go **Configuration > Preferences > License** to enter the Authorization code.

If the Authorization Code is correct, you can discover 64 nodes then.

